

Tri-Roller Kit For Greensmaster® 3000 Series Model No. 04495—210000001 and Up

Parts Catalog

Ordering Replacement Parts

To order replacement parts, please supply: the part number, the quantity, and the description of each part desired.

Understanding Reference Numbers

Each identified part in an illustration has a reference number. The reference number for a part also appears in the parts list, along with other information about the part.

This catalog uses two special reference number formats, one to indicate parts in a service assembly and another to indicate the quantity of a given part in an illustration.

Service Assembly Reference Numbers

Parts in service assemblies have reference numbers in the form **a:b**. The **a** represents the reference number of the entire service assembly and the **b** represents a sequential number unique to each part within the service assembly.


For example, a wheel assembly might be identified by reference number 6, the tire by 6:1, the valve by 6:2, and the wheel by 6:3. When you order the assembly identified by reference number 6, you receive all parts identified by reference numbers 6:1, 6:2, and 6:3. However, you may also order any part individually.

Reference numbers of this type appear in illustrations and in part lists.

Reference Numbers Indicating Quantity

In an illustration, if a reference number indicates more than one part, the reference number has the form \mathbf{nX} \mathbf{y} . The \mathbf{n} represents the quantity of the part, the \mathbf{X} is the multiplication symbol, and the \mathbf{y} represents the reference number.

For example, in an illustration, the reference number **2X 37** means that two of the parts identified by reference number 37 are indicated.

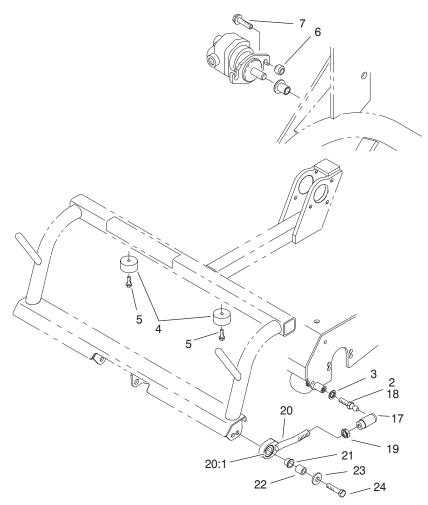

Sheet No.:0


Tri-Roller Mounting Assembly

Ref. No.	Part No.	Qty.	Description
†7 *†8 *†9 17 18 19 20 20:1 21	3254-6 94-4548 32144-44 61-2370 32144-102 3256-24 95-1642-01 54-7460 54-7430 3220-5 18-3049 95-0532 256-292 75-5270 3256-4	3666611216666616666	Stud-Ball Washer-Lock, Internal Bumper-Recessed Screw-HWH Spacer Screw-HWH Washer-Flat Weight-Counter Ball Joint Stud-Ball Nut-Jam Pull Link ASM Rubber Bushing ASM Bushing-Flange, NI Spacer-Knob, Seat

Ref. No.	Part No.	Qty.	Description

Not serviced Not illustrated

[†] Greensmaster 3050 & 3100

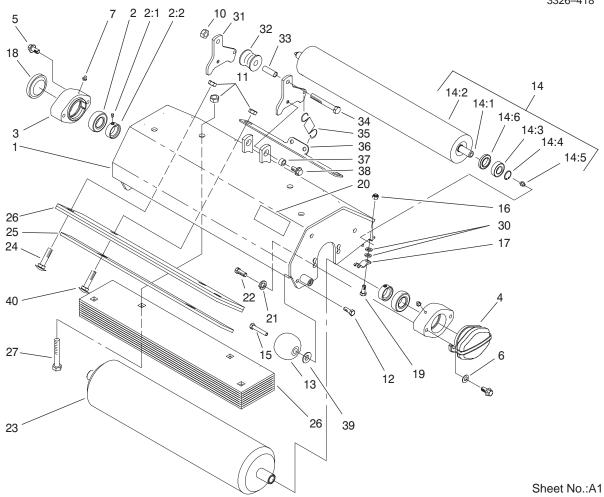

Tri-Roller Assembly

Ref. No.	Part No.	Qty.	Description
1	100-6443-01	1	Frame ASM
2	94-3405	2	Bearing-Ball
2:1	3245-35	1	Screw_HS
2:2	251-77	1	Bearing-Lockcollar
3	95–7148	2	Housing-Bearing
4	95-1642-01	1	Weight-Counter
5	93-2569	4	Screw-HHF
6		2	Washer–Flat
7	302-5	2	Fitting-Grease
10	3296-39	1	Nut–Lock, NI
11	33026-00	6	Nut-Lock
12	323-5	2	Screw-HH
13	99-4210	2	Roller–Anti Scalp
14	99–1615	1	Rear Roller ASM
14:1	93-2466	1	Shaft–Roller
14:2	99–1616	1	Rear Roller Tube ASM
14:3	93–2559	2	Bearing-Ball
14:4	93-2525	2 2	Ring–Retaining
14:5	302–5	2	Fitting-Grease
14:6	98–2194	2 2	Sleeve-Grease
15	99–4209	2	Shaft–Roller
16	33024-00	2	Nut-Lock
	99–8168	2 1	Collar-HOC
	2410-30		Cap-Plastic
	33114–025	2	Screw-HH
20	67–1300	1	Decal-Toro

Ref. No.	Part No.	Qty.	Description
21 22 23 24 25 26 27 30 31 32 33 34 35 36 37 38 39 40	100–6446–01 100–6449 100–6448 323–12 88–6330	441219242111122222	Washer-Lock Screw-HH Roller ASM Screw-CARR Plate-Scraper Plate-Weight, Long Screw-HH Washer-Flat Plate-Pivot Roller-Lift Spacer-Roller Screw-HH Spring-Extension Plate-Spring Mount Tube-Spacer Screw-HHF Washer-Flat Screw-CARR

